




# 30-1500RPM

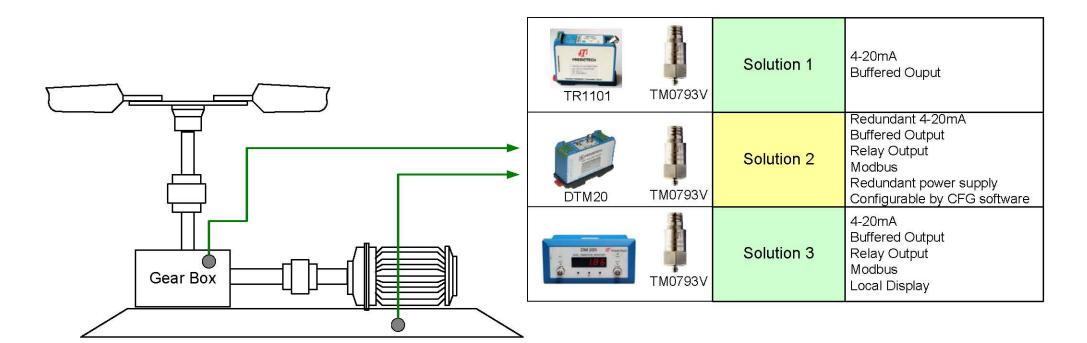






## **TR1101 Seismic Vibration Transmitter**

The TR1101 is a cost-effective solution for monitoring case vibration on balance of plant machines. The TR1101 conditions the signal from an accelerometer or velocity transducer and provides a 4-20mA output in acceleration, velocity or displacement.

### **Features**

- √ Measures machinery case vibration
- 4-20mA output in acceleration, velocity or displacement
- ✓ Buffered output up to 300 meters (1,000 feet)
- ✓ Compatible with other manufacturers' sensors (accelerometer or velocity sensor)
- Aluminum casted (copper free) case with epoxy potting for better environmental protection and reliability
- √ Compact size

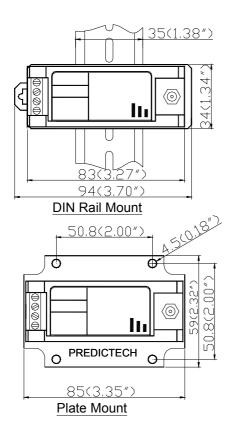





# **Specifications**

### **Electrical**

Power Supply:

22-30VDC, 100mA (Non isolated)

Frequency Response (±3dB):

Acceleration: 2.0 - 10 KHz

Velocity: 2 - 10 KHz (velocity sensor) Velocity: 10 - 5 KHz (accelerometer)

Displacement: 10 - 3 KHz (velocity sensor) Acceleration (low frequency): 1.0 - 100Hz

Velocity (low frequency): 1.0 - 100Hz (TM079VD)

Displacement (low frequency): 1.0 - 100Hz (TM079VD)

Sensor Interface:

Sensitivity:

100mV/g nominal for accelerometer or

4.0 mV/mm/sec (100 mV/in/sec) nominal for

velocity sensor

40mV/mm/sec (1000mV/in/sec) nominal for velocity TM079VD or 4mV/um (100mV/mil) nominal for

displacement TM079VD

**Current Source:** 

Nominal 4mA@24VDC

Connectors:

GAP/Buf: gap and buffered output

SIG: sensor signal COM: signal com 4-20mA: 4-20mA output



# Proximity Transmitters and Seismic Vibration Transmitters

### **Electrical Specifications Continued**

**Buffered Output:** 

Original vibration, un-filtered

Impedance: 100  $\Omega$ 

Maximum cable distance: 300m (1,000ft)

Sensitivity: same as the sensor

Overall Vibration: 4-20mA, source

Driving load resistance up to 750  $\Omega$ 

System Self-test:

System OK: output 4-20mA System Not OK: output < 3.0mA

### **Physical**

Height: 75mm (2.95") Weight: 1.0kg (2.0 lbs)

#### **Environmental**

Temperature:

Operation: -40°C to +70°C Storage: -40°C to +100°C

Humidity:

90% non-condensing

# **Order Information**

\*Factory Default

TR1101-AXX-EXX-GXX

### **AXX: Full Scale**

A00\*: 0 - 200um pk-pk

A01: 0 - 500um pk-pk

A02: 0 - 100um pk-pk

A03: 0 - 10mil pk-pk

A04: 0 - 25mil pk-pk

A05: 0 - 5.0mil pk-pk

A06: 0 - 50mm/s pk

A07: 0 - 100mm/s pk

A08: 0 - 20mm/s pk

A09: 0 - 2.0ips pk

A10: 0 - 4.0ips pk

A11: 0 - 1.0ips pk

#### **AXX: Full Scale Continued**

A12: 0 - 5.0g pk

A13: 0 - 10g pk

A14: 0 - 5.0g pk (low frequency)

A15: 0 - 10g pk (low frequency)

A16: 0 - 50mm/s pk (low frequency, E01, E04)

A17: 0 - 100mm/s pk (low frequency, E01, E04)

A18: 0 - 500um pk-pk (low frequency, E04)

A19: 0 - 200um pk-pk (low frequency, E04)

A20: 0 - 2.0ips pk (low frequency, E04)

A21: 0 - 4.0ips pk (low frequency, E01, E04)

A22: 0 - 20mil pk-pk (low frequency, E04)

A23: 0 - 10mil pk-pk (low frequency, E04)

A24: 0 - 2.0ips (50 mm/s) rms

A25: 0 - 1.0ips (25 mm/s) rms

A26: 0 - 0.8ips (20 mm/s) rms

A27: 0 - 0.5ips (12.5 mm/s) rms EXX: Sensor Type (not included)

E00\*: Accelerometer TM0782A, TM0783A, TM0784A,

TM0785A, TM0786A or any current mode

accelerometer with 100mV/g

E01: Velocity sensor TM0793V, TM0796V or any current

mode velocity sensor with 4mV/mm/sec

E02: 330500, 330525 velocity sensor

E03: 330750 velocity sensor

E04: TM079VD low frequency sensor

**GXX: Mount** 

G00\*: DIN rail mount

G01: Plate mount

### TR1101 Accessories

The TR1101 requires an external accelerometer or velocity sensor to work as a system.

### TM0782A, TM0783A, TM0784A, TM0785A, TM0786A:

Accelerometer

TM0793V, TM0796V: Velocity sensor


TM079VD: Low frequency velocity and displacement sensor


TM900: Power converter

TM0200: 3-1/2 digit display unit



# **Field-Wiring Diagram**

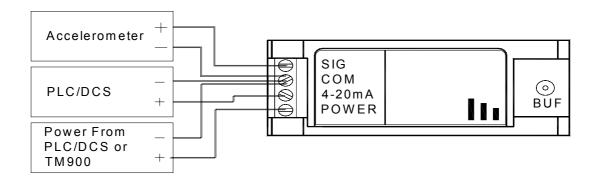

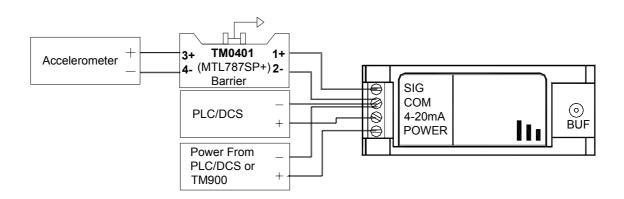

#### Note:

Other barriers available:

TM0402: (STAHL 9001/51-280-091-141)

TM0407: (STAHL 9160/13-11-11)



## **DTM20 Seismic Vibration Distributed Transmitter Monitor**

### (Acceleration, Velocity and Displacement)

The DTM20 distributed vibration transmitter monitor provides a simple and cost-effective solution for monitoring critical and balance of plant equipment. The DTM's smart design is extremely reliable with redundancy in power supply inputs, 4-20mA outputs and relay outputs, as well as, a modbus communication port. The DTM interfaces with almost any vibration sensor (accelerometer or velocity transducer). The DTM is fully digital and may be configured in the field or come pre-configured from the factory.

## **Applications Include**

- **Motors**
- **Pumps**
- √ Fans
- ✓ Blowers
- ✓ Engines
- ✓ Compressors
- ✓ Centrifuges
- **Generators**
- **Turbines**
- **Turbochargers**

## **DTM20 Fully Configurable by Software**

- **Acceleration**
- Velocity
- **Displacement**



#### **DTM20 Features**

- Measures acceleration, velocity or displacement
- **Direct Modbus RTU interface**
- Redundant 4-20mA outputs (pk or RMS)
- Redundant power supply inputs
- Fully digital field-configurable or factory pre-configured
- **Dual relay outputs with Alert and Danger** (SPDT)
- ✓ LED indication of system OK, Alert and
- ✓ Local and remote RESET/BYPASS and trip-multiply
- **Buffered output for condition monitoring**
- Aluminum case (copper free) for RFI/EMI protection



## **Specifications**

# **Electrical**

Power Supply:

22-30VDC, 150mA

Galvanic isolation: power to circuits

Accepts dual power supplies

Frequency Response ( $\pm 3dB$ ):

Nominal Frequency:

Acceleration: 2 - 2 KHz. Velocity: 2 - 2 KHz Displacement: 4 - 2 KHz

Low Frequency:

Acceleration: 0.5 - 100Hz

Velocity: 0.5 - 100Hz (TM079VD)

Displacement: 0.5 - 100Hz (TM079VD)

ICP Sensor Interface:

Sensitivity:

100mV/g for TM0782A

4.0mV/mm/sec (100mV/in/sec) for TM0793V

4mV/um for TM079VD

Sensitivity of any vibration sensor can be

specified

**Current Source** 

Nominal 4mA@24VDC

Seismic Velocity Sensor Interface:

Sensitivity:

User specifies for any vibration sensor

Software programmable

(This type of seismic velocity sensor does not

require external power)

**Buffered Output:** 

Original, un-filtered signal

Impedance: 550  $\Omega$ 

Maximum cable distance: 300m (1,000ft)

Sensitivity: same as the sensor

Local BNC connection

Remote terminal connection

Overall Vibration:


Dual 4-20mA, source


Maximum load resistance 500  $\Omega$ 

Alarm Setup:

0 - 100% FS

Accuracy: ±0.1%

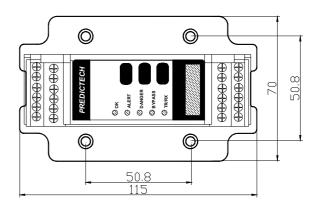

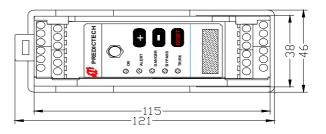

Relays:

Seal: Epoxy

Capacity: 0.2A/240VAC, 0.4A/110VAC or 2.0A/24VDC,

resistive load

Relay type: SPTD

Isolation: 1,000VDC

LED Machine Condition Indicator:

OK: System OK indication

ALT: Vibration over Alert level

DNG: Vibration over Danger level

BYP: System in bypass

TRX: Digital transmitting

RESET/BYPASS:

Local reset: On monitor front panel

Remote RESET/BYPASS: Shorting the connector pin

RESET and COM will engage system reset and bypass

Trip-Multiply

Shorting the connector pin Trip-Multiply and COM will engage system alarm level increases to factor

pre-setting

Modbus:

Modbus RTU. With RS485 not isolated from the system,

isolation can be done with the DTM96

**Physical** 

Dimensions: Height: 75mm (2.95")

Weight: 2.0lbs (1.0kg)



#### **Environmental**

Temperature:

Operation: -40°C to +85°C Storage: -50°C to +100°C

Humidity:

90% non-condensing

Case:

Aluminum casted (copper free) case

#### **Certifications**

CE certified with EMI compliance CSA Class I, Div. 2, Groups A, B, C & D, T4 ATEX III 3G Ex nA II T4

## **Order Information**

\* Factory default

#### DTM20-AX-BX-SX

# Customer fully-configurable seismic vibration **DTM** (requires DTM-CFG Software)

#### **AX: Alarms and Sensor**

A0: Dual epoxy sealed relay alarms, current mode

A1: No alarm, current mode sensor

A2: Dual epoxy sealed relay alarms, seismic velocity

A3: No alarm, seismic velocity

**BX: Mounting** 

B0: DIN rail mount B1: Plate mount

SX: Approvals

S0\*: CE S1: CE

> CSA Class I, Div.2, Groups A, B, C & D, T4 ATEX III 3G Ex nA II T4

**AXX: Full Scale** 

A00: 0 - 200um (8mil) pk-pk A01: 0 - 500um (20mil) pk-pk A02: 0 - 100um (4mil) pk-pk

DTM20-101-AXX-CX-GX-HX-IX-SX

**Factory pre-configured seismic vibration DTM** 

A03: 0 - 250um (10mil) pk-pk A05: 0 - 125um (5mil) pk-pk

A06\*: 0 - 50mm/s (2.0 ips) pk

A07: 0 - 100mm/s (4.0 ips) pk

A08: 0 - 20mm/s (0.8 ips) pk

A11: 0 - 25mm/s (1.0 ips) pk

A12: 0 - 5.0g pk

A13: 0 - 10g pk

A26: 0 - 50mm/s (2.0 ips) rms

A27: 0 - 100mm/s (4.0 ips) rms

A28: 0 - 20mm/s (0.8 ips) rms

A31: 0 - 25 mm/s (1.0 ips) rms

#### CX: Alarms

C0\*: Dual alarms with epoxy sealed relays

C1: No Alarm

### **GX: Mounting**

G0\*: DIN rail mount G1: Plate mount

#### **HX: Sensors (not included)**

H0\*: TM0782A or any current mode accelerometer with 100mV/g (A00-A05 not available)

H1: TM0793V or any current mode velocity sensor with 4mV/mm/s (A12, 13 not applicable)

H2: TM079VD (A12, 13 not available)

HXXX: Seismic velocity sensor, Sensitivity = XXX mV/in/sec (A12, 13 not available)

## IX: Frequency Response

I0\*: Normal frequency (H2 not available)

I1: Low frequency (0.5-100Hz)

## SX: Approvals

S0\*: CE S1: CE

CSA Class I, Div.2, Groups A, B, C & D, T4

ATEX III 3G Ex nA II T4

# DTM Distributed Transmitter Monitor



## **Optional Accessories**

### **DTM-CAL**

The DTM field calibration kit is capable of calibrating any 5mm, 8mm and 11mm probe system. The kit includes:

- ✓ DTM-CFG configuration and calibration software CD
- ✓ RS485-USB converter with cable
- ✓ TM0540 proximity probe field calibration kit

### DTM-CFG-K

DTM configuration and calibration software kit includes:

- ✓ DTM-CFG configuration and calibration software CD
- ✓ RS485-USB converter with cable

### TM900

Power converter with isolation. It converts 95-250 VAC into 24VDC and has the capability to power up to five DTM modules.

### Sensors


TM0782A-K: Accelerometer kit TM0783A: Accelerometer with cable TM0793V-K: Velocity sensor kit TM079VD: Low frequency sensor

### **TM0200**

3-1/2 digit display unit. Requires 110VAC or 230VAC power input.



## **DTM20 Field-Wiring Diagram**

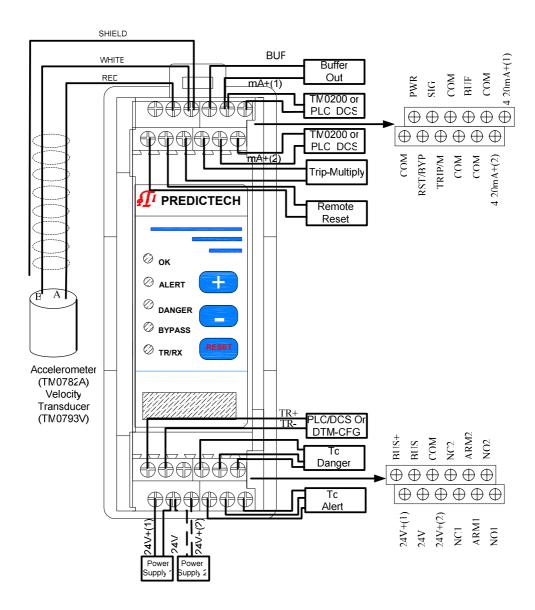


### Note:

- ✓ Power supply 2 is optional.
- ✓ Alert and Danger relays are connected as normally open. Connect ARM with NC to form a normally closed configuration.
- √ 4-20mA (2) is optional.
- Closing COM and RST/BYP with an external continuous or momentary switch will initiate a remote reset. Temporarily closing the switch will result in a system reset, continuous close will result in a system bypass.
- ✓ DTM20 series is compatible with other manufacturers' sensors (accelerometers and velocity transducers).



## **DTM20 Hazardous Area Field-Wiring Diagram**

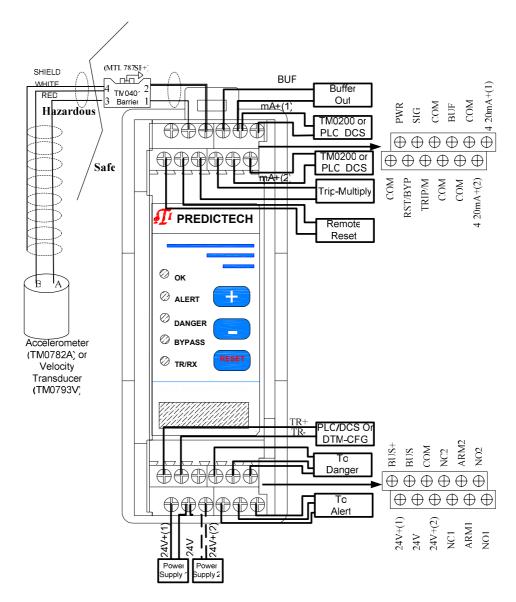

### Note:

- ✓ Power supply 2 is optional.
- ✓ Alert and Danger relays are connected as normally open. Connect ARM with NC to form a normally closed configuration.
- ✓ 4-20mA (2) is optional.
- ✓ Closing COM and RST/BYP with an external continuous or momentary switch will initiate a remote reset. Temporarily closing the switch will result in a system reset, continuous close will result in a system bypass.
- ✓ DTM20 series is compatible with other manufacturers' sensors (accelerometer sand velocity transducers)
- ✓ Other barriers available:

TM0402: (STAHL 9001/51-280-091-141)

TM0407: (STAHL 9160/13-11-11)



# DM200 Dual-Channel A/V/D Vibration Monitor

### Introduction

DM200 is a dual channel vibration monitor. It is used to monitoring rotation machine's absolute vibration with acceleration, velocity or displacement.

#### **Features**

- ✓ Dual channels case vibration monitoring with acceleration, velocity or displacement
- ✓ Independent alert and danger dual relays on each channel
- ✓ Fully digital, long term stability
- ✓ IP 65 or NEMA 4X environmental rating
- √ Bright 4 digit LED display
- √ Front panel buffered output
- √ Wide power supply range
- √ Cost effective

# **Specifications**

## **Electrical**

Power Supply:

90 -250VAC, 40 -60Hz, 0.5A

Frequency Response: (±3dB):

Standard: 2.0 - 3.0 KHz without integration

Integration: 10 – 3.0 KHz


Low frequency option: 0.5-100Hz

External Sensor:

Accelerometer: 100 mV/g Velocity sensor: 4.0mV/mm/s Low frequency sensor: 4.0mV/um Other sensors (specify in order)

Sensor Power:

Current mode sensor: 24VDC, 4mA

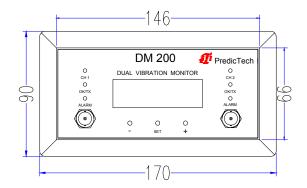



Low frequency sensor: 24VDC, 3 wire

**Buffered Output:** 

Original vibration, un-filtered

Sensitivity/frequency resp.: same as the sensor

Impedance:  $< 100\Omega$ 

Maximum cable distance: 300m (1000ft)

Overall Vibration Output:

4-20mA source

Load resistance <  $500\Omega$ 

System Not OK: Output<3.5mA

Alarms:

Dual dry-contact relays on each channel Each alarm can be programmed separately

Setting: 0-100% full scale

Accuracy: ±0.1% Relays (Alert/Danger):

Seal: Epoxy

Capacity: 3A/220VAC resistive load

Relay Type: SPDT Isolation: 1000VDC

Alarm delay:

Factory programmable: 1-30 seconds. With time interval

of 1 second (specify in order)

Nominal 6 seconds

Trip Multiply:

Factory programmable with a factor of 2 or 3 (specify in

order).

Nominal factor or 3

RESET/ BYPASS:

Local RESET: The bottom "SET" button

Remote RESET/BYPASS

Display:

4 digit LED displays channel 1 and 2 in three seconds

interval.

OK: channel ok indication Alarm: alarm indication



### **Physical**

Weight: 1300 g (2.86 lbs) Installation: panel mount. Dimension: see graphics.

#### **Environmental**

Temperature

Operation:-20°C to +70°C Storage:-40°C to +100°C

Humidity:

95%non-condensing With IP65 rating or NEMA 4X:

> Front panel buffered output will not be available. Alarms setting and ZERO calibration will not be available from the front panel access.

# **Ordering Information**

# DM200-AXX-BX-CX-DX

**AXX: Full Scale** 

A12: 0 ~ 5.0g pk

A13:  $0 \sim 10q \text{ pk}$ 

A40: 0 ~ 20mm/s rms

A41: 0 ~ 25 mm/s rms

A42: 0 ~ 50mm/s rms

A43: 0 ~ 100mm/s rms

A46: 0 ~ 1.0 ips rms

A47: 0 ~ 2.0 ips rms

A48: 0 ~ 4.0 ips rms

A50: 0 ~ 20mm/s pk

A51: 0 ~ 25 mm/s pk

A52: 0 ~ 50mm/s pk

A53:  $0 \sim 100 \text{mm/s pk}$ 

A56: 0 ~ 1.0 ips pk

A57: 0 ~ 2.0 ips pk

A58: 0 ~ 4.0 ips pk

A60: 0 ~ 100um pk-pk

A61: 0 ~ 125um pk-pk

A62: 0 ~ 200um pk-pk

A63: 0 ~ 250um pk-pk

A64: 0 ~ 500um pk-pk

A66: 0 ~ 5mil pk-pk

A67: 0 ~ 10mil pk-pk

A68: 0 ~ 20mil pk-pk

#### BX: Sensor (not include)

B0\*: TM0782A, TM0783A, TM0786A TM016-782 or any ICP accelerometer with 100mV/g (A00-A05 not applicable)

B1: TM0793V, TM0796V, TM016-793 or any ICP velocity sensor with 4mV/mm/s (A12, 13 not applicable)

B2: TM079VD (A12, 13 not available)

BXXX: Seismic velocity sensor, Sensitivity = XXX mV/in/sec (A12, 13 not available)

#### **CX: Frequency Response**

C0\*: Normal Frequency (B2 not applicable)

C1: Low Frequency (B2 only)

#### **DX: Environmental Rating (front panel)**

D0\*: No rating

D1: IP65 or NEMA 4X (buffered output and setting not available)

# **Optional accessories:**

DM200 must works with external accelerometer or velocity sensors as a system.

#### TM0782A, TM0783A, TM0786A, TM016-782:

Accelerometers

## TM0793V, TM0796V, TM016-793:

Velocity sensors

### **TM079VD:**

Low frequency sensor


## **TM070X:**

Sensor cables

<sup>\*</sup> Factory default



# **Field-Wiring Diagram**

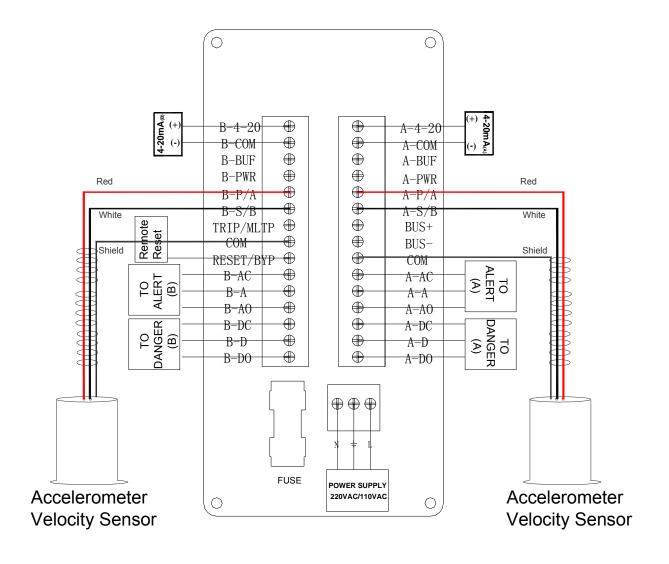



# Velocity Transducer TM0793V

### Piezoelectric Velocity Transducer

The TM0793V-K velocity transducer kit consists of one velocity transducer and one 5 meter cable. This velocity transducer kit directly interfaces with ProvibTech's signal conditioners: distributed transmitter monitors (DTM), transmitters (TM), dual monitors (DM) and PT580 vibration switches to measure case vibration in velocity or displacement.

# **Specifications**

#### **Electrical**

Sensitivity:

4.0mV/mm/sec (100mV/in/sec), @ 25°C, ±10%

Velocity Range:

5.0V pk

Amplitude Nonlinearity:

Frequency Response:


2 - 7,000Hz (±3dB)

Isolation:

Fully isolated

Transverse Sensitivity:

< 5% or axial

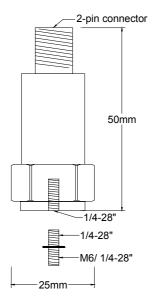











Power Requirement:

3 - 10mA constant current

18 - 30VDC

Resonance Frequency:

15 kHz

Bias Voltage:

10 - 14VDC

Maximum Transmission Distance:

300 meters (1,000 feet)

## **Environmental and Physical**

Temperature Range:

-50°C to +120°C

**Environmental Protection:** 

**IP67** 

Weight:

250 grams

Case Material:

Stainless steel

Mounting:

1/4-28UNF tapped hole

Hazardous Area Approvals:

ATEX: II 1 G, Ex ia IIC T4;

CSA: Class I, Div. 1, Groups A, B, C & D;

PCEC: Ex ia IIC T4

### **Connection**

A: Power (red)

B: COM (white)



TM0793V-M-S

TM0793V-E-S

Hazardous area approval

Hazardous area approval

Velocity sensor with mounting screw 1/4-28" to M6×1

Velocity sensor with mounting screw 1/4-28" to 1/4-28"



# **Order Information**

#### TM0793V-M

Velocity sensor with mounting screw 1/4-28" to M6×1

### TM0793V-E

Velocity sensor with mounting screw 1/4-28" to 1/4-28"

### TM0793V-K-M

Velocity sensor kit includes:

- √ TM0793V velocity sensor
- ✓ Mounting screw (1/4-28" to M6×1)
- ✓ TM0702-05

### TM0793V-K-E

Velocity sensor kit includes:

- ✓ TM0793V velocity sensor
- ✓ Mounting screw (1/4-28" to 1/4-28")
- ✓ TM0702-05

#### Accessories:

(Standard cable length is 5 meters. XX = 05)



**TM0702-XX:** Aluminum MIL connector with XX meters cable, 6.35mm diameter. < 120°C (250°F)



**TM0703-XX:** Seal tight boot connector with XX meters cable, 6.35mm diameter.  $< 120^{\circ}\text{C} (250^{\circ}\text{F})$ 



**TM0704-XX**: Stainless steel MIL connector with armored XX meters cable, 4.83mm diameter.  $< 150^{\circ}C (300^{\circ}F)$ 



**TM0705-XX**: Cornered MIL connector with XX meters cable, 6.35mm diameter.  $< 120^{\circ}\text{C} \ (250^{\circ}\text{F})$ 

TM0710: Mounting screw 1/4-28" - M6×1
TM0711: Mounting screw 1/4-28" - 1/4-28"
TM0712: Mounting screw 1/4-28" - M8
TM0713: Mounting screw 1/4-28" - M10